





ASSEMBLY INSTRUCTIONS

A FRAME HIGH ARM / LOW ARM


PARTS IN THIS BOX

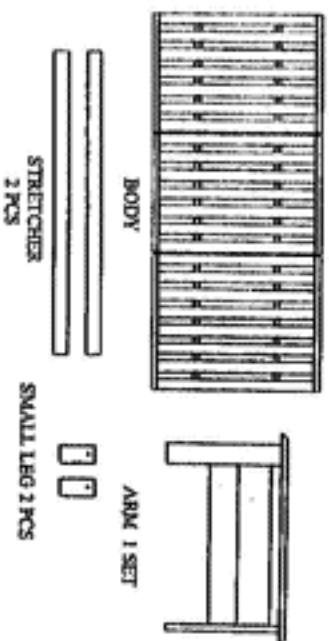


HARDWARE IN THIS BOX

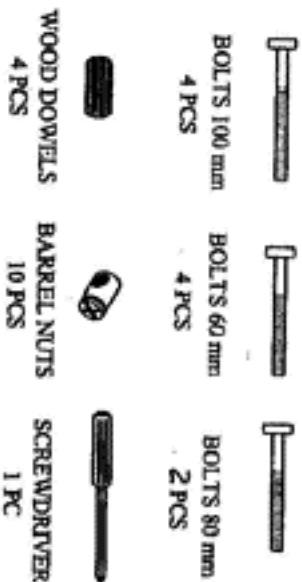


1 TAP DOWEL ALL THE WAY INTO THE MIDDLE HOLE AT EACH END OF STRETCHER.

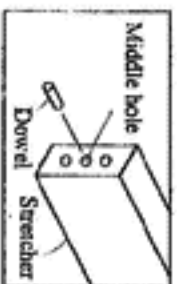

2 ATTACH THE STRETCHER TO THE ARM AS SHOWN BY USING BOLTS WITH BARREL NUT.

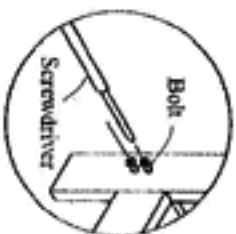

DO NOT TIGHTEN THE BOLTS AT THIS STAGE!

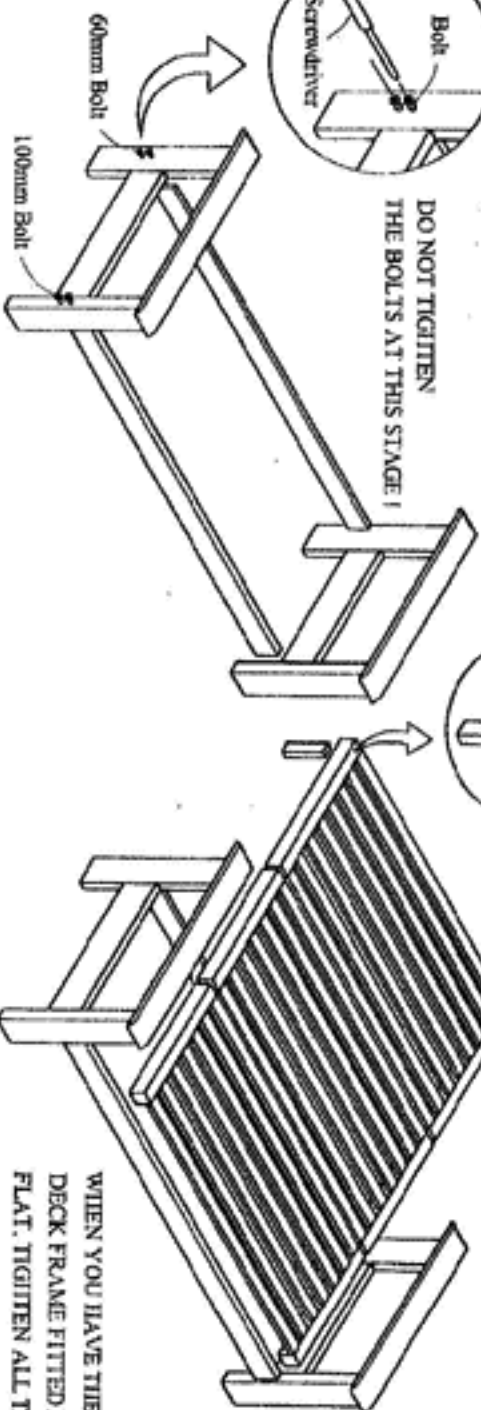

3 PLACE THE BODY INTO ARM GROOVE AND ATTACH THE SMALL LEG TO THE LONG RAIL OF BODY AS SHOWN BY USING 80mm BOLTS.

WHEN YOU HAVE THE DECK FRAME FITTED LYING FLAT, TIGHTEN ALL THE BOLTS.

HOW TO CONVERT YOUR A FRAME

